 




Samsung Blackjack Back Phone Casing Replacement

Replace or remove the back phone case on your Samsung Blackjack.

Written By: Kristin Manna

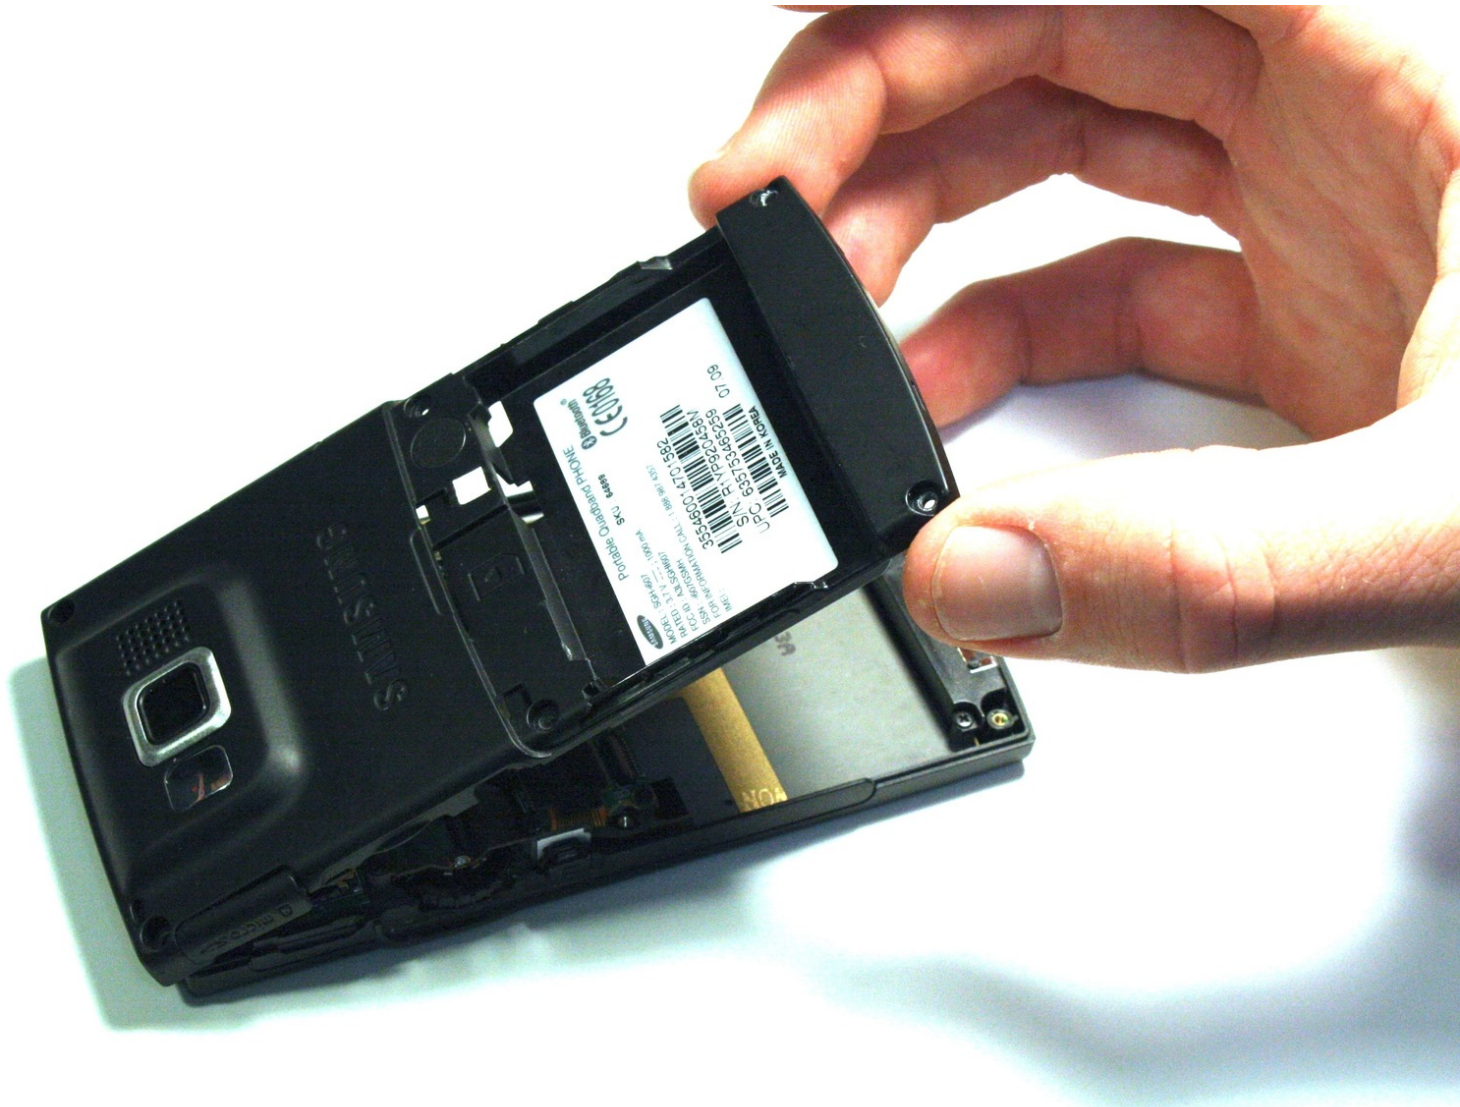

INTRODUCTION

Use this guide to replace the back phone case and to remove the casing to access the inside of the phone.



TOOLS:

 
- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery Cover



- Hold the device with the screen facing away from you and the camera towards you.
- Place your thumb on the bottom half of the phone and slide the cover off while gently pushing down on the cover.

Step 2 — Battery

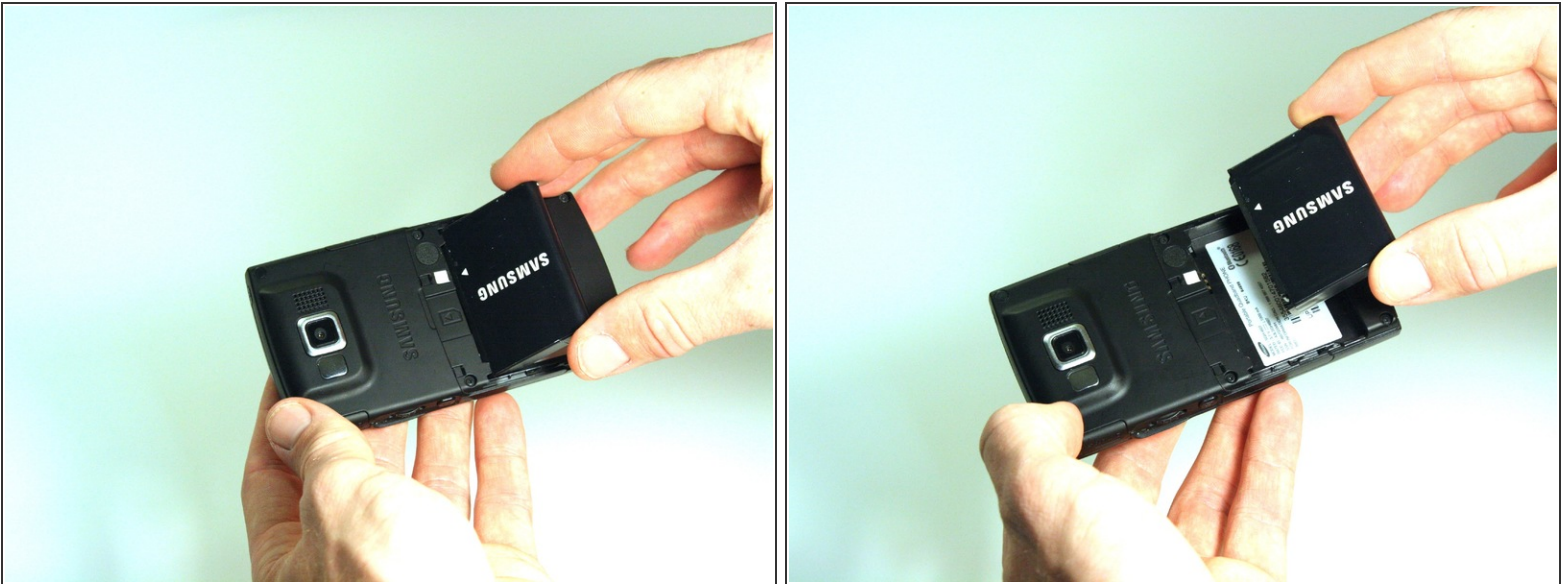


- Place your fingers on both sides of the bottom of the battery and lift upwards.
- Pull the battery away from the phone.

Step 3 — SIM Card




- Place your thumb on the SIM card.
- Slide the card out of the slot.

 Step 4 — Back Phone Casing

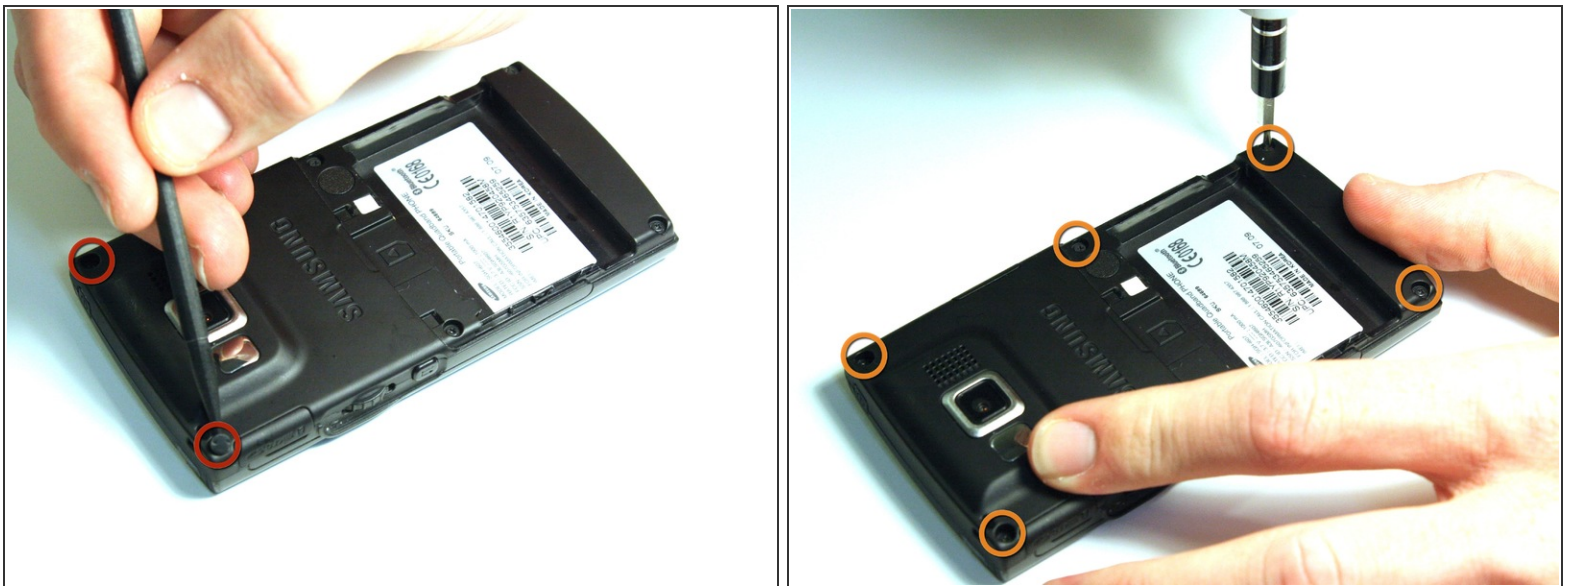

- Use the spudger to remove the rubber stoppers from the top of the cover.
- Use the Phillips 00 screw driver to remove the screws from each of the four corners and the two on sides (six total).

 Step 5

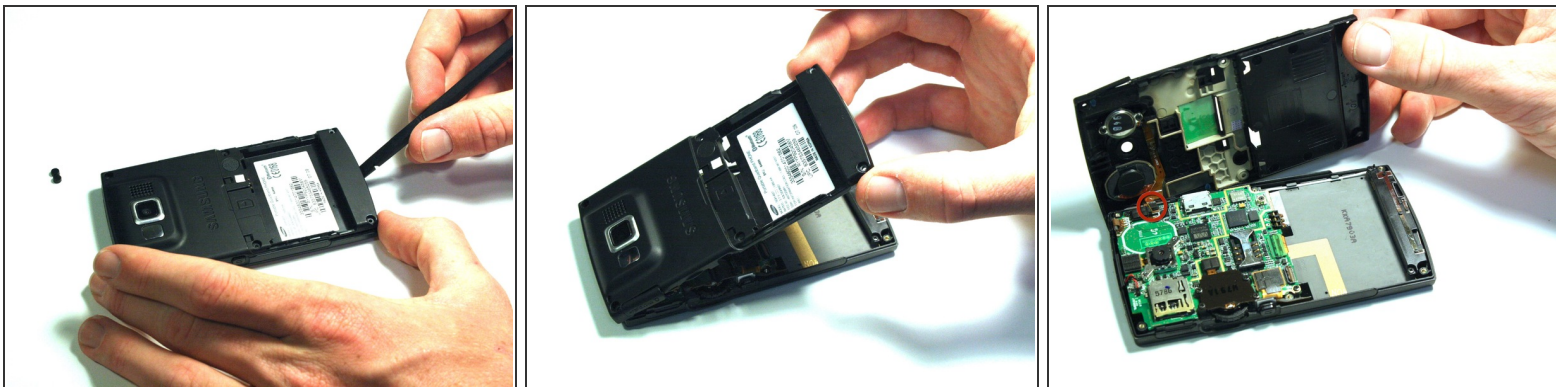

- Use the spudger to loosen and separate the front and back covers.
- Pick up the back cover once loosened.

 ***The front and back covers will be attached to each other by a gold wire.***

- Remove the gold wire connecting the back cover to the motherboard to completely separate the covers.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-07 05:47:10 AM.